



Notes For TTL Modulation

TYPE 1

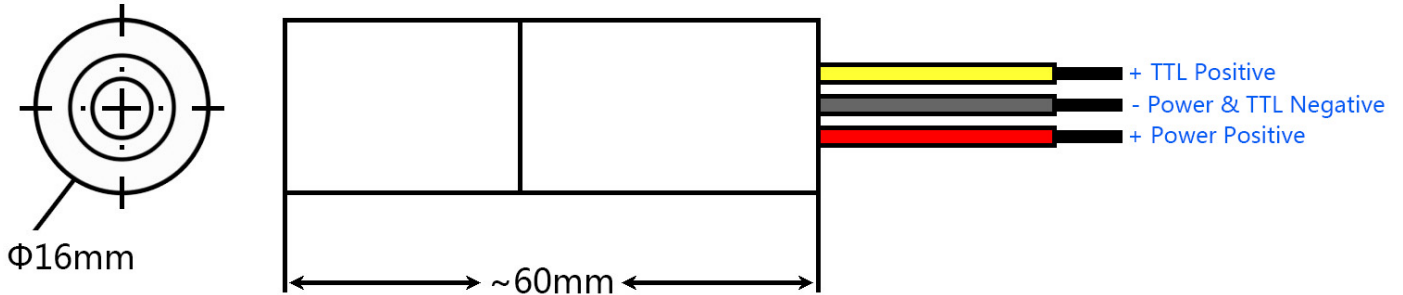

1. No TTL Signal input the Laser CW output. (Just connect two wires of Black & Red to power source).
2. Input TTL Signal 3 - 5V DC, the Laser Pulse output as input TTL signal frequency. (Black & Yellow wires).

TYPE 2

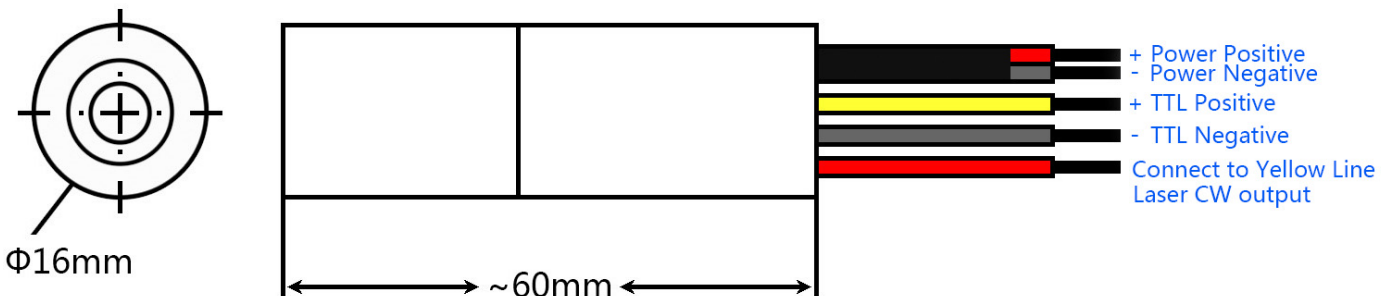

1. Connect the Power wires to power source (Black & Red), then connect (Yellow & Red wires) in parallel, Laser CW output.
2. Input TTL Signal 3 - 5V DC, the Laser Pulse output as input TTL signal frequency. (Black & Yellow wires).

Input >3V Laser Output Do not input >5.2V